Parts of the laser head such as nozzle, sensor, sensor interface and attached fasteners may not be fully protected by the ground wire due to function fault. These parts may have lo1mesb5(e)-2(n)-lta(n)-g(o)-(lo-4(T3

1 Safety Instructions & Precaution 1
1.1 Summary 1
1.2 Operation Standards 1
1.3 Warning signs and instructions 1
1.4 Damage Source 1
1.5 User Guideline 3
2 Handheld Cleaning Head 5
2.1 The Connection of QBH Interface and Handheld Cleaning Head 5
2.2 Removal and Installation of Cover Glass 6
2.3 Inspection 7
2.4 Safety Shutter 7
3 Controller 8
3.1 Connection of HMI Panel Communication Wire and Controller 9
3.2 Connection of Laser and Controller 9
3.3 Connection of Handheld Cleaning Head and Controller 10
3.4 Connection of Power Supply and Controller Box 10
3.5 Connection of Gas Valve, Chiller and Controller 11
4 Software Introduction 12
4.1 Main Interface Description 12
4.2 Setting 14
4.3 Process Library 15
4.4 Monitoring 16
Schedule 4 Wiring Diagram between Controller and Fiber Laser 17
1 BWT Laser DB25 17
3 Maxphotonics Laser Aviation Plug- 12PIN Interface 19
4 Raycus 380/220V DB25 PIN 20
5 JPT Fiber Laser 24PIN 22
6 IPG YLR-Y14 22
7 Feibo Laser 24

Laser beams may hurt eyes and skin. This product is classified as the Class 4 according to different damage definition.
Therefore, please wear protective eyeglasses when cleaning and beaming out. Otherwise, D-278(o)-2(u)-4(t.ETQqg4(ie)llt.E7n)-

Laser fiber and circuit cables should be placed well, following the minimum bending radius of fiber. And the connecting wire should be away from transportation channels and machine parts with frequent and severe vibration.

Please comply with the following important rules when operating laser (for reference).
Operators should ensure to comply with these mandatory standards and regulations.
As shown in Figure 1.1, International Standard:

IEC60825	Radiation of laser product
EN60825	Safety of laser product
EN207	Personal eye-protection equipment Filters and eye-protectors against laser radiation.
EN60204	Electrical equipment of machines

Figure 1.1

1. Close all water/gas/ electrical circuit and safety shutter before maintaining and check in the clean environment.
2. Commission and maintain laser products regularly according to the manual. Please refer to the following chapters for maintaining detail and replace parts as required.
3. Check whether devices testing laser product are in good working regularly.

Emergency including:

1. Laser leakage.
2. Movement caused by uncontrolled system components.
3. Fire or explosion.
4. Leakage of harmful substance.

Safety measure:

1. If there are any other situations will affect human health or damage materials, please solve them timely.
2. If the danger is caused by laser products, press the emergency top button to stop radiating laser and running machine.
3. Other specific measures should be taken for different situation.
4. We recommend that users of laser products should identify potential risks through assessment and then take corresponding measures, to minimize losses or give emergency treatment to the injured.
5. Please prepare emergency signs in visible places where there is potential risk.

2

Figure 3.1

1 As shown in Figure 3.2.

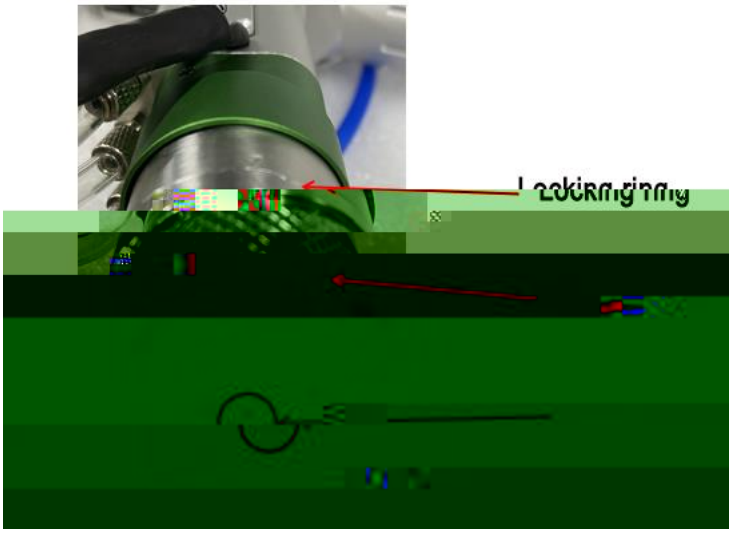

Figure 3.2

3

Controller overview of handheld cleaning system

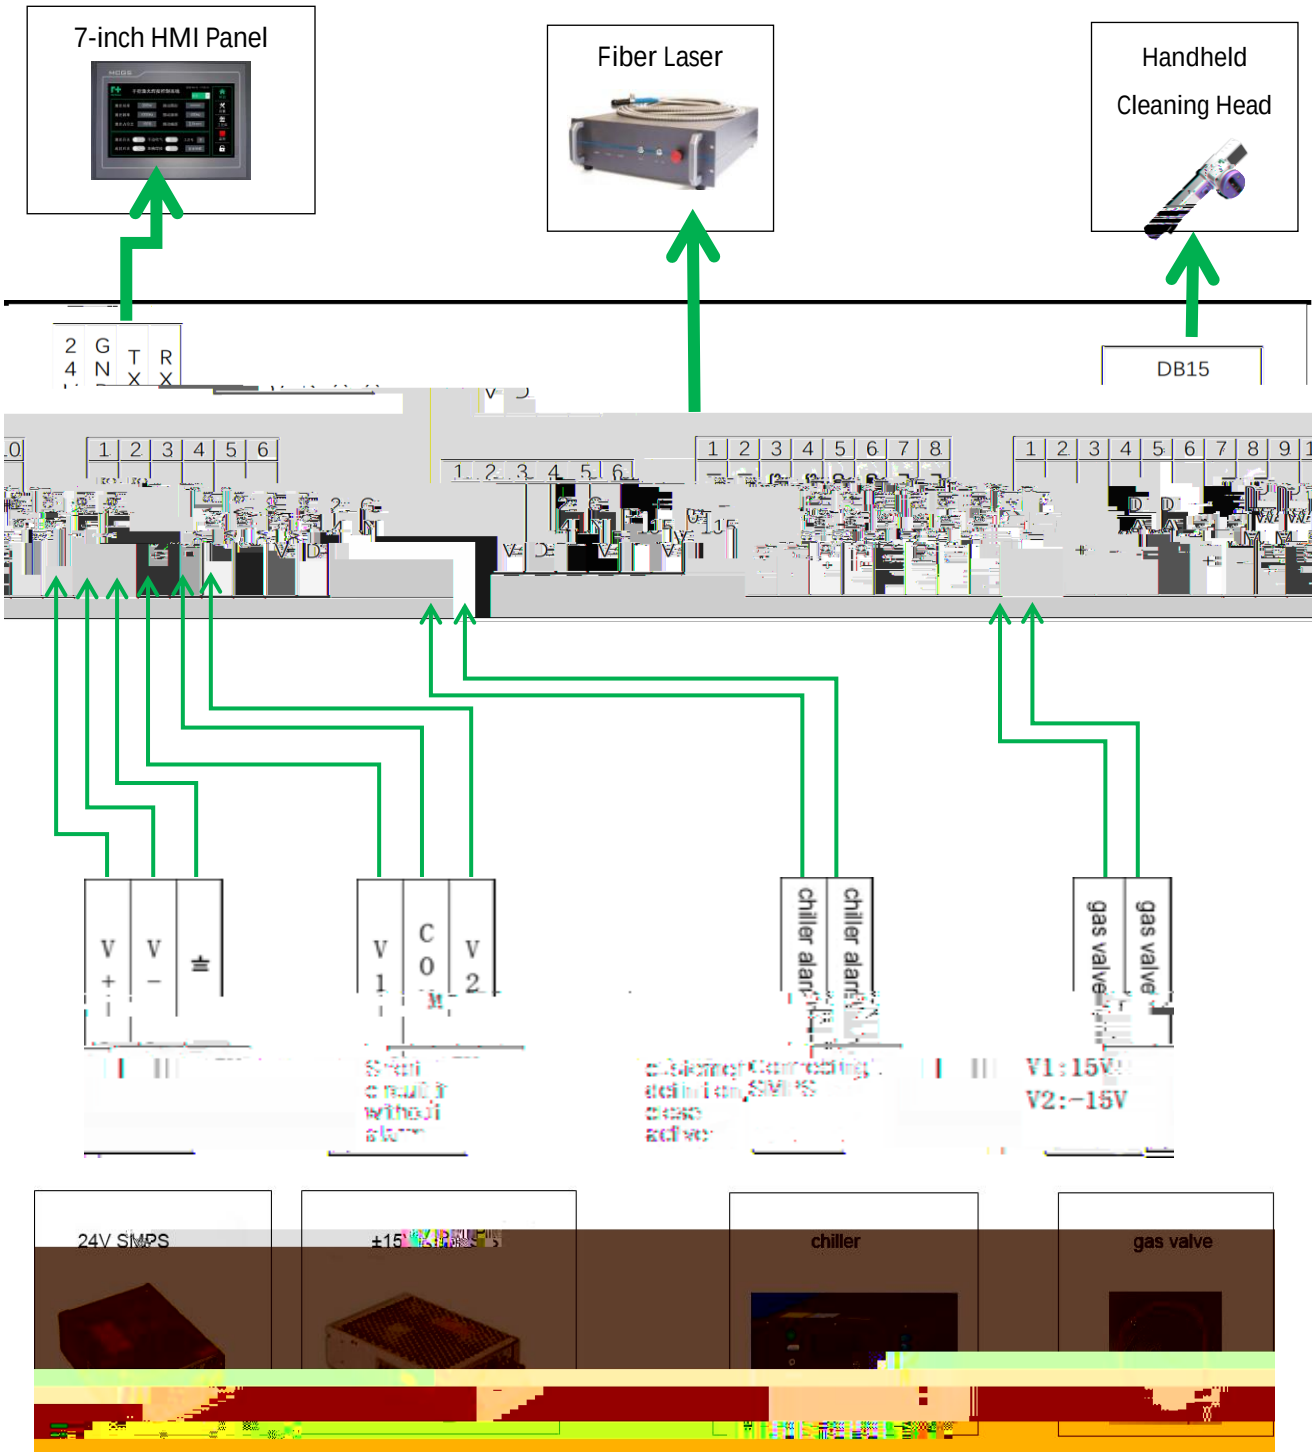

As shown below.

Connect the control box with Enable , PWM and DA of the laser (Laser Fault is not required). However, different lasers require different wiring methods, and some lasers need to be interlocked before beaming out.
As shown in Figure 4.4.

Figure 4.4

Enable Enable + laser enable output signal + Enable - laser enable output signal ground. Enable input generally NPN active

PWM PWM+ modulation output signal + PWM- modulation output signal ground. control laser modulation beaming

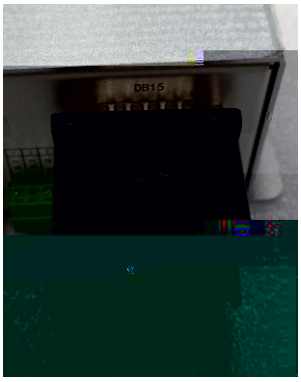

Figure 4.5

DB15 interface on the cleaning head wire connecting DB15 interface of control box, as shown in Figure 4.5.

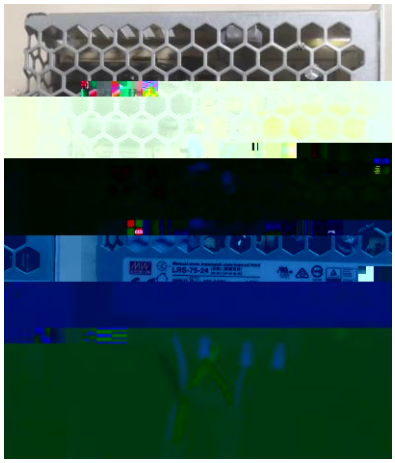

24V

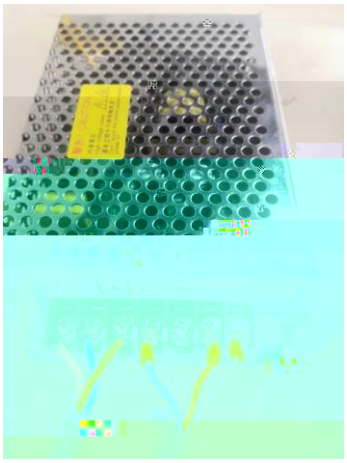

15V

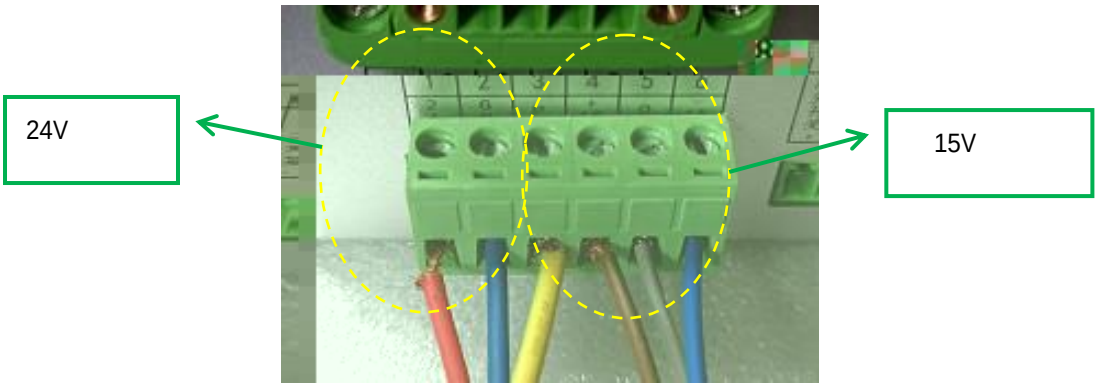

4.6

As shown in Figure 4.6:

15V Power: V1 to 15V+, V2 to 15-, and com to GND.

24V Power: V+ to 24V+, and V- to GND.

4

Home

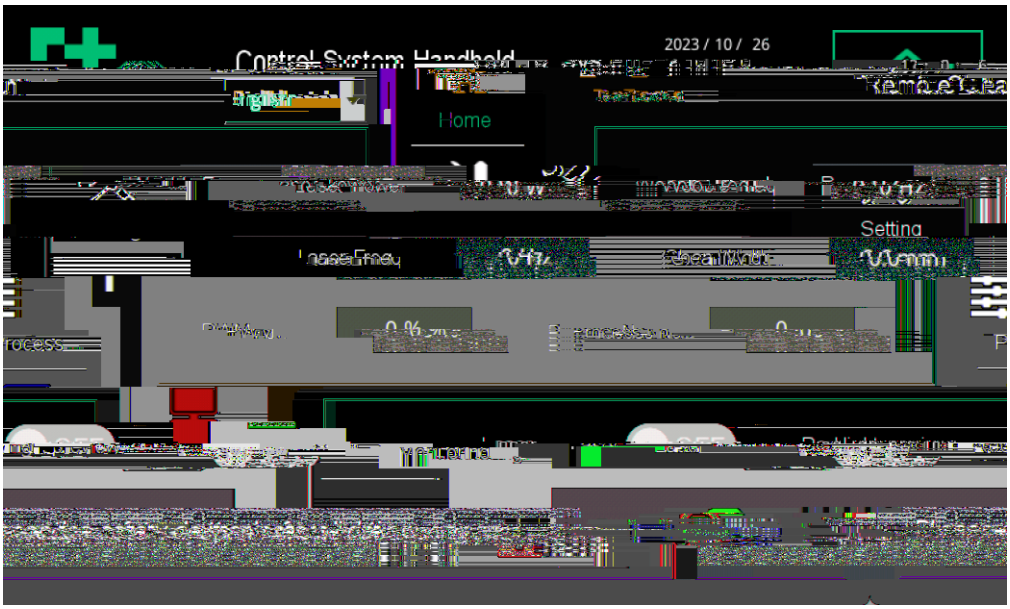

Figure 7.1

1. Laser Power Laser Power laser output power: 0-2000W
2. Laser Freq

O If without opening shutter or opening incompletely, the sign is the safety shutter before lighting ;

10.

Setting: Modify parameters in this interface

11. Process: Include various process reference parameters and could be modified and selected

12. Monitoring Red for alarm, please check IO status and fault signal

13. Screen locking: Locking the screen to stop operation. It mainly used for preventing accidental touch by other people when operating, resulting in light off in welding or beaming when the operator debugs, to ensure the safety of the operator. When operating, click on the screen locking to unlock it, and click again to lock the screen again;

14.

Multi-language switching button: Click the language dropdown box and select the required language.

Gas in Advance: Gas in Adance: The time for laser lighting and gas valve blowing in advance after opening switch;

Gas Delay: Gas Delay: The time for gas valve stopping blowing after closing switch;

Max Power: Max. Power: Setting based on Max. power of laser in actual usage. (range: 0-2000W);

Alarm Signal: Alarm Signal: Selecting based on laser and wiring confn actual usage. NPN for short circuit

Safety Lock Interval: Safety Lock Intreval: Valid interval during clicking lighting button tw;

X Magn: Magn: Has been corrected before selling, supporting adjustment if necessrary.

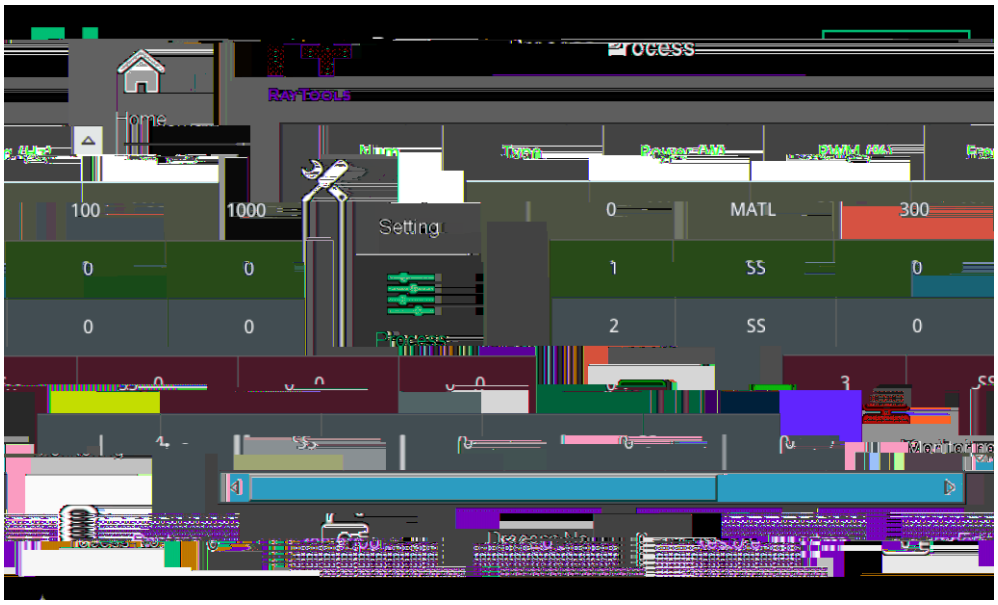

Process Parameters Displaying each parameter clearly including Type, Power(W), PWM (%) and Freq (Hz);

Process No: Valid process No. to use after saving modified parameters and back Home by clicking Import;

Import: Click to apply selected Process No;



Edit Click Save to save modified parameters;

Restore: Click to restore factory reset.

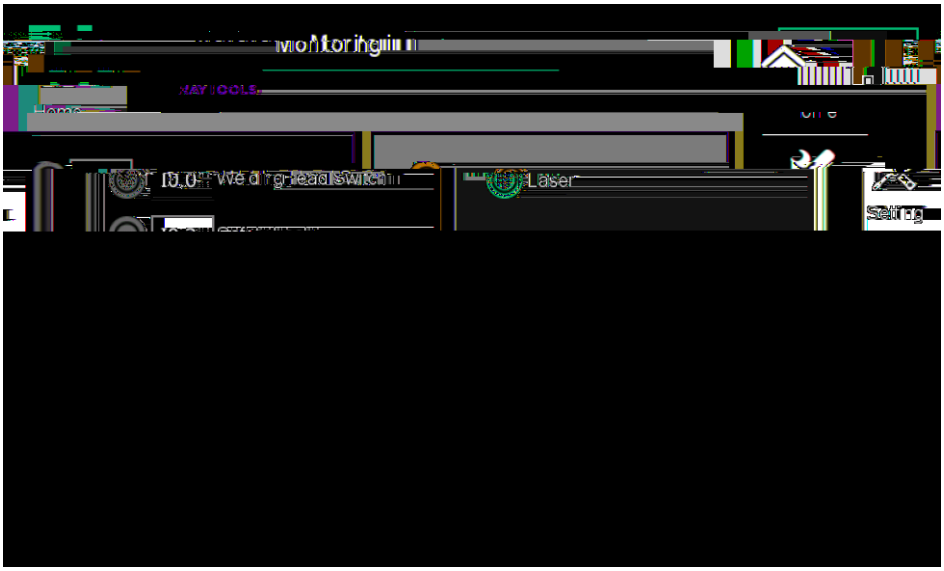

Input / Output Status

I0.0 WeldingHead switch: ON/OFF of cleaning head;

I0.3 Safety Lock Whether safety lock is in-pos;

Q0.2 LaserEnable Laser Enable signal output status;

Q0.4 Gas Valve Gas valve output status;

DA: DA signal output status.

Alarm signal

Laser: Green for normal and red for abnormal alarm;

Chiller: Green for normal and red for abnormal alarm;

HMI Panel-LaserCard Communication: Green for normal and red for abnormal alarm;

HMI Panel-GalvoCard communication: Green for normal and red for abnormal alarm;

Gas: Gas pressure alarm, green for normal and red for abnormal alarm;

 HMI Panel Version & LaserCard Version: Each generation of products matches a corresponding software version. Details here will correspond to the HMI panel, laser card and galvo card version, and the

No.	Definition	Function	Description
1	Enable+	Enable input signal +	5V-24V, PNP active.
2	Enable-	Enable input signal ground	
3	AD+	Analog input +	0V-10V, control laser output power (10V to 100% output power).
4	AD-	Analog input ground	
5	Bias+	Bias Current +	Max. value: 1V.

Pin	Definition	Remark
1	RS485-A	485 Interface for parameter setting, fault checking and program upgrading.
2	RS485-B	
3	REM_START-	24V active, for starting device remotely (with same functions as Power button).
4	REM_START+	
5	LASER_EN+	24V active, for beaming enable in AD mode.
6	LASER_EN-	
7	KEY_LOCK	Short circuit for normal status and displaying KEY_LOCK alarm for disconnecting
8	KEY_LOCK	
9	EX_ALARM_OUT+	Fault signal output +

CTRL interface No.	Wiring color	Function	Description
1	Red	Enable input +	24V VDC active.
2	Red & white	Enable input -	
3			

PIN	Item	Input/ Output	Function		Typical value	Min.	Max.	Current
6	LASER EN	Input	Laser beaming EN signal	EN	24V	15V	28V	8mA
				No	0V	0V	3V	
7	ADEN							

NO.	Handheld Controller
1	DA+
2	DA-
3	EN+
4	EN-
5	PWM+
6	PWM-
7	Fault input+
8	Fault input-

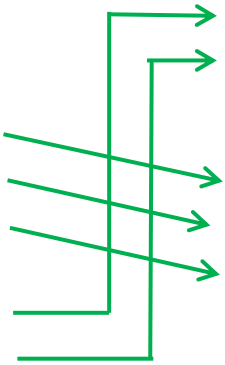

Raycus 380/220V Laser modulation signal	
	MOD +
	MOD -

Raycus 380/220V Laser DB25	
22	Analog
25	AGND
6	LASER EN
24	Alarm
7 20	7-ADEN; 20-EXVCC
9	EXGND

NO.	Handheld Controller
1	24V
2	GND
3	Fault light
4	Preparation light
5	Running light

PIN	Item	Type	Level	Description
1				
2				
3	Interlock channel +	C		

PIN	Signal	Description
1	INTLK1A	Interlocking switch 1A, 1A1B close active
2	INTLK2A	Interlocking switch 2A, 2A2B close active
3	INTLK2B	Interlocking switch 2B, 2A2B close active
4	INTLK1B	Interlocking switch 1B, 1A1B close active
5	RS232 RX	RS232 receiving, no use with DB9-RS232
6	RS232 TX	RS232 sending, no use with DB9-RS232
7	CASE	RS232 RS485 signal ground
8	RS485 D+	Spare communication interface (RS485)
		unication interface (RS485)
		or internal testing signal
		or internal testing signal
		g input (0-10V) g voltage = 10-100% output power 10V: 10V
		ge (Pin 12) signal ground
		tact signal input, 16-24V active
		rface signal ground (Pin15-Pin24)
		EN input V: OFF
		input EN / 0V: control stop
		output signal V: NO
		rface signal ground (Pin15-Pin24)